

Weistec Supercharger Maintenance

Every time you change your engine oil following the manufacturer's mileage recommendation, also check that...

- The supercharger cog belt, and engine drive belt are in good condition and have proper tension and wear.
- There are no signs of oil leaks from the front supercharger housing.

For every 50,000 miles put on the supercharger drain and refill its oil.

(Weistec PN: 02-000-00092-3); each 160ml bottle is the perfect amount for one supercharger so there is no measuring required.

Supercharger Oil Change Instructions

- Locate the upper access plug on the front of the supercharger.
- Remove plug using a 6mm hex head or Allen key.



- Using a fluid pump, remove all fluid from the front supercharger case.
- Fill the front case with 160ml of the recommended fluid.



- Check that the plug threads and crush washer are in good condition, reinstall, and torque to 10 ft/lbs.